



Note: Toggle switch is in small electric box near base of auger.  
 RF Remote Switch is in the larger electric box at top end of auger.

If remote fails to work:

- 1) check that you have 12V DC at source and also check the fuse in toggle switch box,
- 2) check battery in remote,
- 3) check all connections as illustrated above.